



PT-800-DKGRAY Large Mirror Assembly Instructions
(please read for proper installation procedure)





Tools Needed:

1. Drill / Driver
2. 3/16" Drill Bit
3. Rivet Gun
4. Tape Measure
5. A helper for step #3

Large Mirror Assembly Bill of Material:

Item	Hampel Item Number	Description	Qty
1	PT-800-DKGRAY	Large Mirror Frame	1
2	PT-115	Large Acrylic Mirror	1
3	SHD-HDWE-020A	Large Flange Bulbex Rivets	6




Step 1:

Place PT-115 (large mirror) into PT-800-DKGRAY (mirror frame).

Using the center two holes as guides in PT-115, drill through PT-800-DKGRAY.

Using SHD-HDWE-020A (large flange bulbex rivet), attach PT-115 to PT-800-DKGRAY.

*****Please use only the two (2) center holes only*****

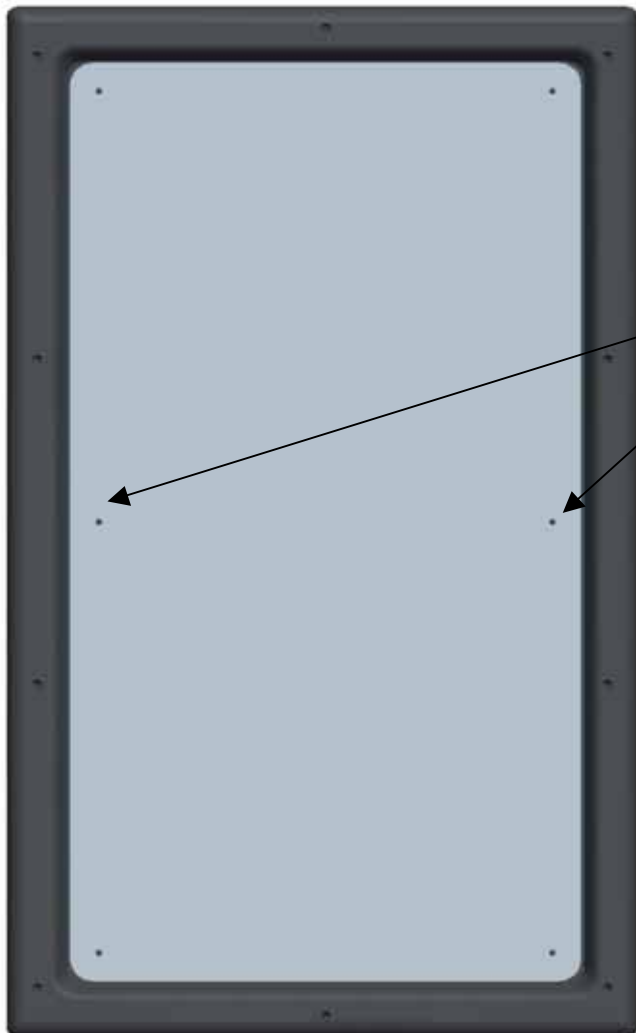


Attach mirror to frame with SHD-HDWE-020A...using these two (2) holes only.



Step 2:

Measure down approximately 1.50" – 1.75" from the bottom of the screen vent feature on the Country Classic Side Panel to the top of PT-800-DKGRAY (large mirror frame).

Measure down 1.50" – 1.75"
from the bottom of the vent
feature to the top of PT-800-
DKGRAY (large mirror frame)

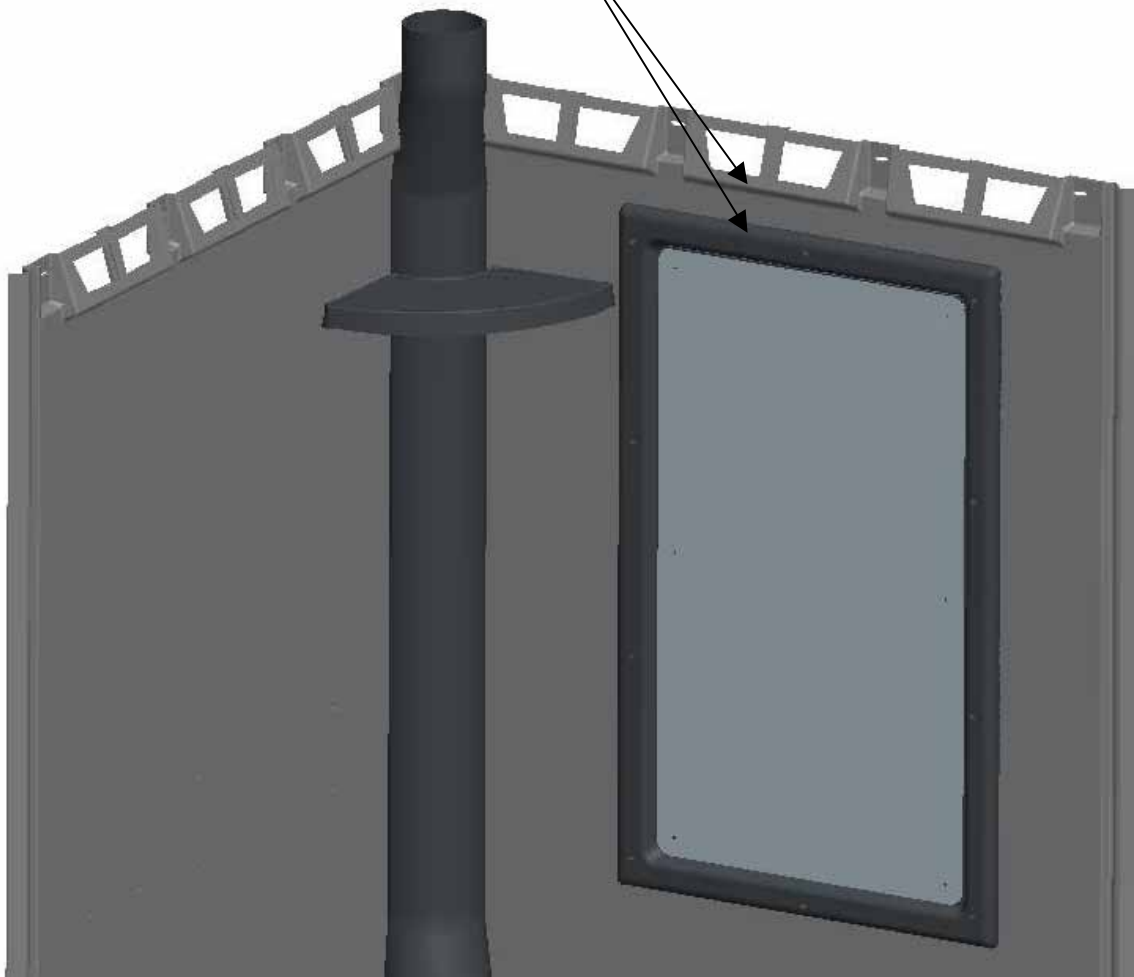



Step 3:

*****The large Mirror Assembly should be 3" away from the dimples used to install the shelf. For easier installation, install the shelf first*****

While holding the Large Mirror Assembly in place (a helper would make this part easier), using the pre-drilled holes in PT-115, carefully drill through PT-800-DKGRAY (large mirror frame) and into the Side Panel of the unit.

*****Please note: In this area of the Side Panel there are two wall thicknesses...to assemble correctly, drill through the first wall thickness only...this will keep the rivet used to attach the Large Mirror Assembly from being visible from the outside.*****

